

SECTION 1

**INSTALLATION INSTRUCTIONS
RECEIVING AND HANDLING**

RECEIVING:



Before installing the dock leveler, read and follow the safety procedures and the operating instructions. Failure to follow the safety procedures could result in serious injury and/or death.

Check for possible damage or missing parts immediately upon receipt of unit. Note any damage on receiving papers.

Prepare any claims against carrier if necessary.

NOTE: Damage noticed after receipt must be reported to carrier within 15 days.

HANDLING:

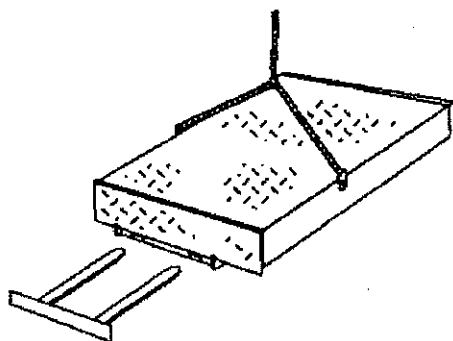


FIGURE A

Move leveler into position by using:

- chain sling inserted into side plate holes. (See Figure A)
- fork lift, inserted into front fork slots.
- fork lift, inserted into rear fork slots just below dock.

NOTE:

Two bumpers, and weather seals, if applicable, are strapped under leveler. Handle with care to avoid damage to these components.

SECTION 1

**INSTALLATION INSTRUCTIONS
INSTALLATION**

INSTALLATION: (Consists of 3 phases)

Pit preparation

Leveler Preparation

Leveler Installation




CAUTION: Before you start to install the leveler, use proper safety signs and barriers to separate the work area from the remainder of the dock.




Never allow anyone to stand on or near dock leveler when it is being lifted or placed into the pit. Failure to follow this warning can allow the dock leveler to fall, tip, or swing into people, resulting in serious injury and/or death.

FIGURE B – PLAN VIEW

“C” Series Pit Detail

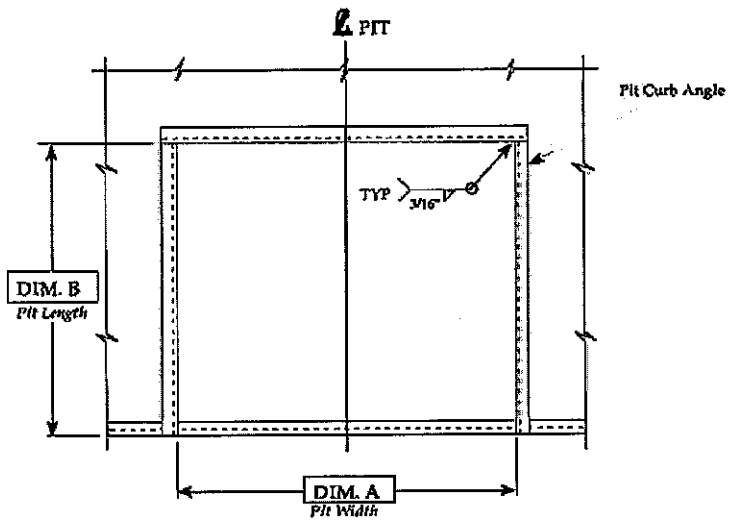


PLAN
DIM. "B" MAT'L: A-36 C. STEEL

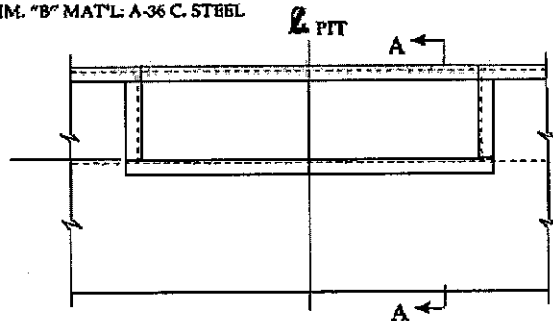

FRONT ELEVATION
DIM. "B" MAT'L: A-36 C. STEEL

VARIABLE DIMENSIONS				
MODEL SIZE	"A"	"B"	"C"	"D"
6'W x 6'L	74"	63"	19 1/2"	20"
6'W x 8'L	74"	87"	19 1/2"	20"
7'W x 6'L	85"	63"	19 1/2"	20"
7'W x 8'L	85"	87"	19 1/2"	20"

INSERT SPECIFIC JOB DIMENSIONS FROM CHART

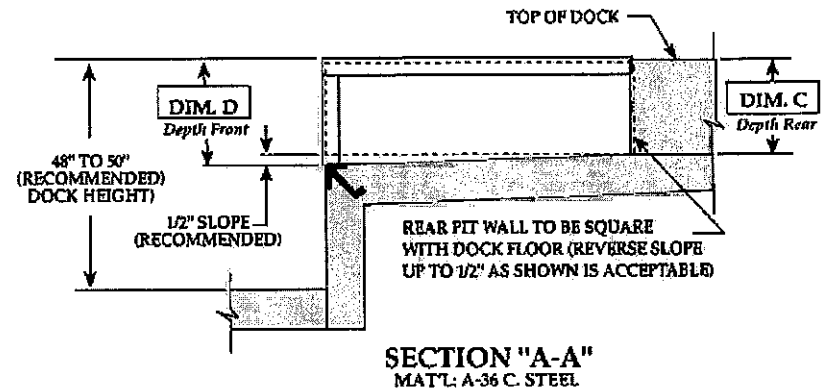

NOTES	DRAWN:	SCALE:	DATE:	DRAWING NUMBER:
	D.E.A.	AS NOTED	6/19/96	PMI-2010
JOB	TOLERANCES:			
	Inch Dimension =	Decimal Dimension =	Angles =	
	1/16"	.005"	= 3°	

SECTION 1

INSTALLATION INSTRUCTIONS PIT PREPARATION

PIT PREPARATION

1. Examine pit
2. Measure pit dimensions. (See "Variable Dimensions" Figure B, Page 1-2)



Before welding the rear frame, cover the rear weather seal with a sheet of steel to prevent setting fire to the weather seals. Failure to do so may result in property damage.

Pits walls should be square and plumb. Clean all debris from pit. Verify that walls are square and plumb.

PRE-PLACEMENT OF SHIMS:

1. Place shims in correct locations on pit floor before lowering leveler into place in pit.

Proper shim thickness will assure that deck of leveler is level with dock floor.

NOTE:

Shims are to be placed directly under rear frame uprights, and under lip keepers. (See Figure C, Page 1-3) and (See Plan View, Page 1-2).

SECTION 1

INSTALLATION INSTRUCTIONS LEVELER PREPARATION

LEVELER PREPARATION

1. Position leveler directly in front of pit
2. Cut restraining band on lip.

WARNING

Be Careful of the lip falling before the lip lock is engaged. The lip plate could fall causing serious injury and/or death.

Remove band completely from leveler..

FIGURE C


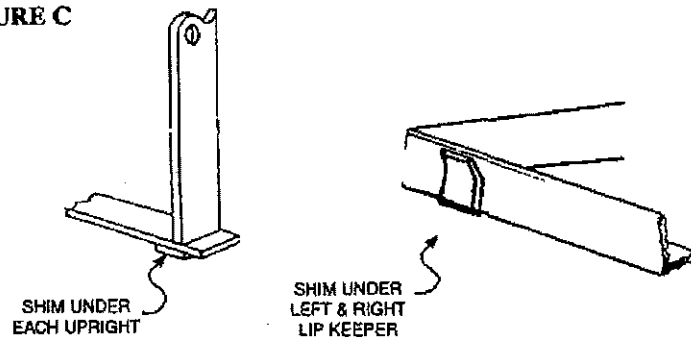


FIGURE D

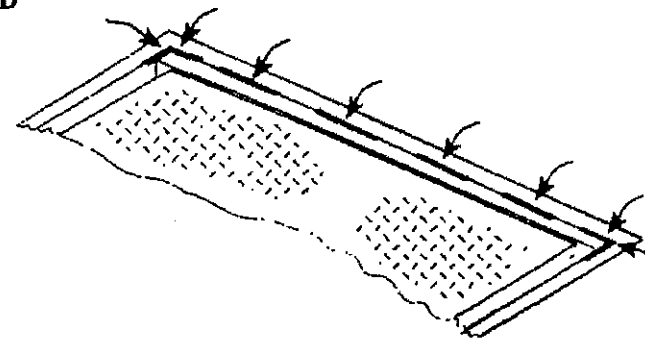

SECTION 1

**INSTALLATION INSTRUCTIONS
LEVELER INSTALLATION**

! WARNING

Keep fingers, hands, and head away from the lip when it is released. Fingers, hands, or head could be struck by or caught between the lip and other parts of the dock leveler causing serious injury and/or death.

! WARNING

Improper installation of anchoring devices or installation into aged or unsound concrete could result in serious injury and/or death.

! WARNING

DO NOT work under the dock leveler, ramp, or lip unless the maintenance strut is in place.

LEVELER INSTALLATION:

1. Place leveler into pit opening.

Allow one inch (1") equal clearance between leveler sides and pit walls. Rear frame angle of leveler should be tight against and flush with rear curb angle for proper welding.

2. Recheck shim packs to ensure leveler is at proper height, flush with floor level, front and rear, after restraining band has been cut.

Shims must be placed properly under each rear frame upright, and front lip keepers. (See Figure C, Page 1-3, for close up view and Plan View B, Page 1-2, for shim locations.)

Skip weld rear of leveler to curb angle (weld center first then ends) and front shims to leveler and curb angle. (See Figure D, Page 1-3)

3. Bring deck section of leveler to fully raised position.

To operate, pull and hold the ratchet release chain located at rear of leveler.

4. Place maintenance strut securely under leveler.

Place strut in tubes located on base & under lip.

SECTION 1**INSTALLATION INSTRUCTIONS
LEVELER INSTALLATION****LEVELER INSTALLATION:**

5. Weld all shims securely in place.	Front shims must be welded securely to frame and steel curb angle. Rear shims must be welded securely to the rear base frame.
6. Store maintenance strut.	
7. Walk forward onto leveler, returning it to dock level with lip in keepers.	
8. Install bumpers on dock face.	Securely bolt bumpers to dock face as close to pit opening as possible. Bumpers should be flush with dock floor or 48" off ground. Raised bumpers should be supported to floor from behind.
9. Complete weld at rear of leveler.	Weld to cover approximately 50% of the length of the rear angle. Ensure welds are placed directly behind frame uprights and at ends of angle. (See Figure D, Page 1-3)

CAUTION: Before you start to install the leveler, use proper safety signs and barriers to separate the work area from the remainder of the dock.

SECTION 2**OPERATING INSTRUCTIONS
ABOVE DOCK OPERATION****! WARNING**

ALWAYS secure the vehicle with a vehicle restraint or wheel chocks before operating the dock leveler.

- * **DO NOT** operate leveler with anyone standing on or in front of leveler.
- * **DO NOT** lift the leveler by hand.
- * **ALWAYS** keep fingers, hands, feet, and head clear of all moving parts.

! WARNING

If the lip does not fully extend, do not lift by hand. Restore leveler to dock level and try again. If lip still does not fully extend, the dock leveler requires maintenance or adjustment. Notify your supervisor. **DO NOT** use the leveler until it has been repaired. Failure to do so could result in serious injury and/or death.

! WARNING

If the lip does not fall to the stored position, the dock leveler requires maintenance or adjustment. Notify your supervisor. **DO NOT** use dock leveler until it has been repaired. Failure to do so could result in serious injury and/or death.

ABOVE DOCK USE:

1. Pull firmly and hold the release ring located in rear of deck.

When deck raises and lip extends, release the ring. **DO NOT** release the ring until the lip is fully extended.

2. Walk forward onto deck to lower unit onto truck bed. (Truck should be secured firmly against bumpers with "Truck Restraint" or wheel chocks.)

With standard locking type lip mechanism, lock will release once lip makes firm contact with truck bed.

3. When truck departs, lip will close to pendant (not stored) position.

This action applies when truck is above dock height.

4. Walk forward onto deck until unit is returned to stored position.

In this position, lip is secure in lip keepers, and ready to receive the next truck.

SECTION 2**OPERATING INSTRUCTIONS
ABOVE DOCK OPERATION****BOVE DOCK USE:**

5. Leveler may be recycled with truck at dock.

Pull the rear release ring in short, rapid pulls allowing deck to raise 2" - 3" above dock with lip down. This allows operator to close the truck and/or building door prior to truck departure.

Walk forward on to leveler, returning it to dock level with lip in keepers.

This allows operator to close the truck and/or building door prior to truck departure.

SECTION 2**OPERATING INSTRUCTIONS
BELOW DOCK OPERATION****BELOW DOCK USE: (WITH LIP EXTENDED)**

1. Repeat steps 1 & 2 for above dock use.

2. As you walk forward on the leveler, pull the safety leg release ring located in the front of deck plate.

This will pull safety legs away from the pads they would normally contact allowing unit to go below dock.

When lip makes firm contact with the truck bed, release the front ring.

3. When truck departs, lip will return to pendant (not stored) position.

Lip will be in front of lip keepers, and deck will remain below floor level.

4. To recycle unit after truck departure, pull release ring in short, rapid pulls.

This action will allow the deck to raise 2" – 3" above dock floor while the lip will remain in a pendant position.

5. Leveler may be recycled with **truck at dock**.

Follow Step #4 to recycle.

6. Following Step #4, walk forward onto deck until unit is returned to stored position.

Lip should be completely closed and resting in lip keepers which provide overnight security.

SECTION 2**OPERATING INSTRUCTIONS
BELOW DOCK OPERATION****BELOW DOCK USE: (LIP RETRACTED FOR END LOADS)**

BELOW DOCK CONTROL OPTION IS RECOMMENDED FOR THIS OPERATION:

1. Pull release ring in short rapid pulls.

Allow deck to raise 2" – 3" above dock floor. (This will raise lip out of lip keepers, without extending lip.)

2. As you walk forward on the leveler, pull the safety leg release ring located in the front of deck plate.

With Below Dock Control option, lip will be pushed out in front of keepers while safety legs are being pulled away from pads.

3. When truck departs, lip will close to pendant (not stored) position.

Lip will be in front of keepers, and deck will remain below dock.

4. To recycle unit after truck departs, pull release ring in short, rapid pulls.

Continue this until unit is 2" – 3" above dock floor.

5. Leveler may be recycled with truck at dock.

Follow Step #4 to recycle.

6. Following Step #4, walk forward onto deck until unit is returned to stored position.

Lip should be completely closed and resting in lip keepers which also provide overnight security.



CAUTION: ALWAYS SECURE LEVELER WITH LIP IN KEEPERS AND SAFETY LEGS FORWARD TO INSURE SAFE CROSS TRAFFIC USE.

ALL "C" SERIES LEVELERS ARE TESTED AND ADJUSTED AT THE FACTORY. HOWEVER, MINOR ADJUSTMENTS TO THE MAIN SPRINGS MAY BE REQUIRED ONCE THE UNIT IS INSTALLED. (UNITS WITH WEATHER SEALS NORMALLY REQUIRE MAIN SPRING ADJUSTMENT TO INSURE PROPER LIP EXTENSION.

WARNING

Read and follow the safety procedures in this manual before doing any service or repair to the dock leveler. ALWAYS SECURE LEVELER WITH MAINTENANCE STRUT BEFORE CLIMBING INTO THE DOCK LEVELER PIT OR DOING ANY MAINTENANCE OR REPAIR UNDER THE DOCK LEVELER. Failure to do so could result in serious injury and/or death.

SYMPTOM:	PROBABLE CAUSE:	CORRECTION:
<p>WHEN RELEASE RING IS PULLED, DECK RAISES BUT LIP DOES NOT FULLY EXTEND AND LOCK.</p>	<p>1. Improper main spring adjustment.</p>	<p>Tighten both main spring adjustment nuts one or two rotation clockwise and re-test. Item #7 (1 1/2" socket or wrench)</p>
	<p>2. Lip lock spring is stretched.</p>	<p>Replace spring or lower spring one or two links in snubber chain. Item #22; Assem. #6</p>
	<p>3. Front base angle installation welds broken free.</p>	<p>Re-weld per installation instructions.</p>
	<p>4. Lip lock spring is broken or disconnected.</p>	<p>Replace broken spring and/or reconnect spring to proper chain link with "S" hook. Item #22, Assem. #6</p>
	<p>Leveler may be servicing trucks that are above the factory set service range (8' models - 12", 6' models - 8") causing lip to impact truck during upward movement.</p>	<p>Minor adjustments to service range above dock may be made in the field. Consult the local Pioneer representative or call the factory for assistance.</p>

CAUTION:

Contact your Pioneer representative or the factory if a malfunction occurs which is not understood. DO NOT attempt to correct the situation without proper information and understanding, as this may damage components and void the warranty.

! WARNING

BEFORE SERVICING THE DOCK LEVELER, READ AND FOLLOW ALL SAFETY PROCEDURES IN THIS MANUAL. FAILURE TO DO SO COULD RESULT IN SERIOUS INJURY AND/OR DEATH.

! WARNING

BEFORE SERVICING THE DOCK LEVELER, ALWAYS POSITION TRAFFIC CONES OR A BARRICADE BEHIND THE DOCK LEVELER. ALSO POSITION CONES OR BARRICADES IN FRONT OF THE LEVELER TO WARN AGAINST VEHICLE TRAFFIC.


- * ALWAYS NOTIFY A FOREMAN OR SUPERVISOR THAT YOU ARE WORKING UNDER THE EQUIPMENT.
- * ALWAYS MAKE SURE THAT THE MAINTENANCE STRUT IS IN POSITION BEFORE WORKING UNDER THE LEVELER.
- * ALWAYS MAKE SURE THAT THE OVERHEAD DOOR IS SECURELY HELD IN THE RAISED POSITION.

SERVICE AND MAINTENANCE


PIONEER recommends periodic inspection and servicing of the "C" Series mechanical leveler to assure proper operation and maximum life span of the dock leveler. Units should be inspected a minimum of every six months, and if needed, (See "TROUBLE SHOOTING", Page 3-1), can be adjusted and lubricated. Contact your local PIONEER dealer to secure a complete maintenance plan.

PARTS LIST	
ITEM	DESCRIPTION
1	LIP PLATE ASSEMBLY 16"
2	HINGE PIN-LIP
3	SPRING - MAIN
4	RATCHET MOUNTING ASSEMBLY UPPER
5	LIP LOCK ASSEMBLY
6	SAFETY LEG ASSEMBLY
7	COLD SHUT, 3/8
8	SPRING - SAFETY LEG
9	ROLL PIN
10	SAFETY LEG CHAIN ASSEMBLY

OPTIONAL KITS (FIELD INSTALLED)	
ITEM	DESCRIPTION
11	LIP ASSIST ASSEM. (OPTIONAL ON 16" & 18" LIP)
12	SHOCK ABSORBER
13	HYDRA LIP KIT
14	FULL RANGE TOES GUARDS (SET)
	WEATHER SEAL KIT 6'
	WEATHER SEAL KIT 8'

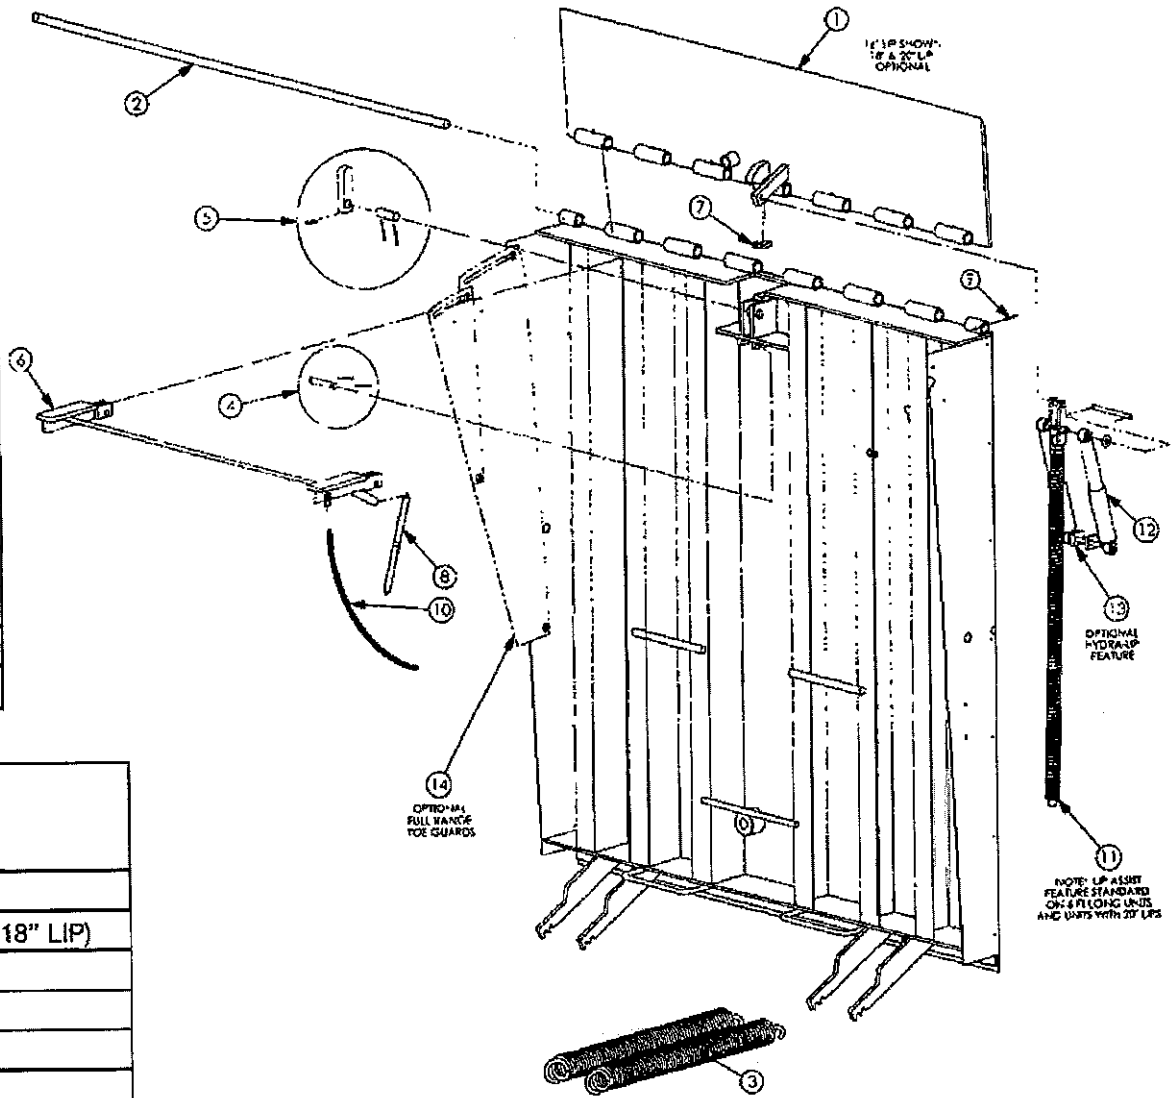

Dock Equipment - "C" Series Mechanical Dock Leveler

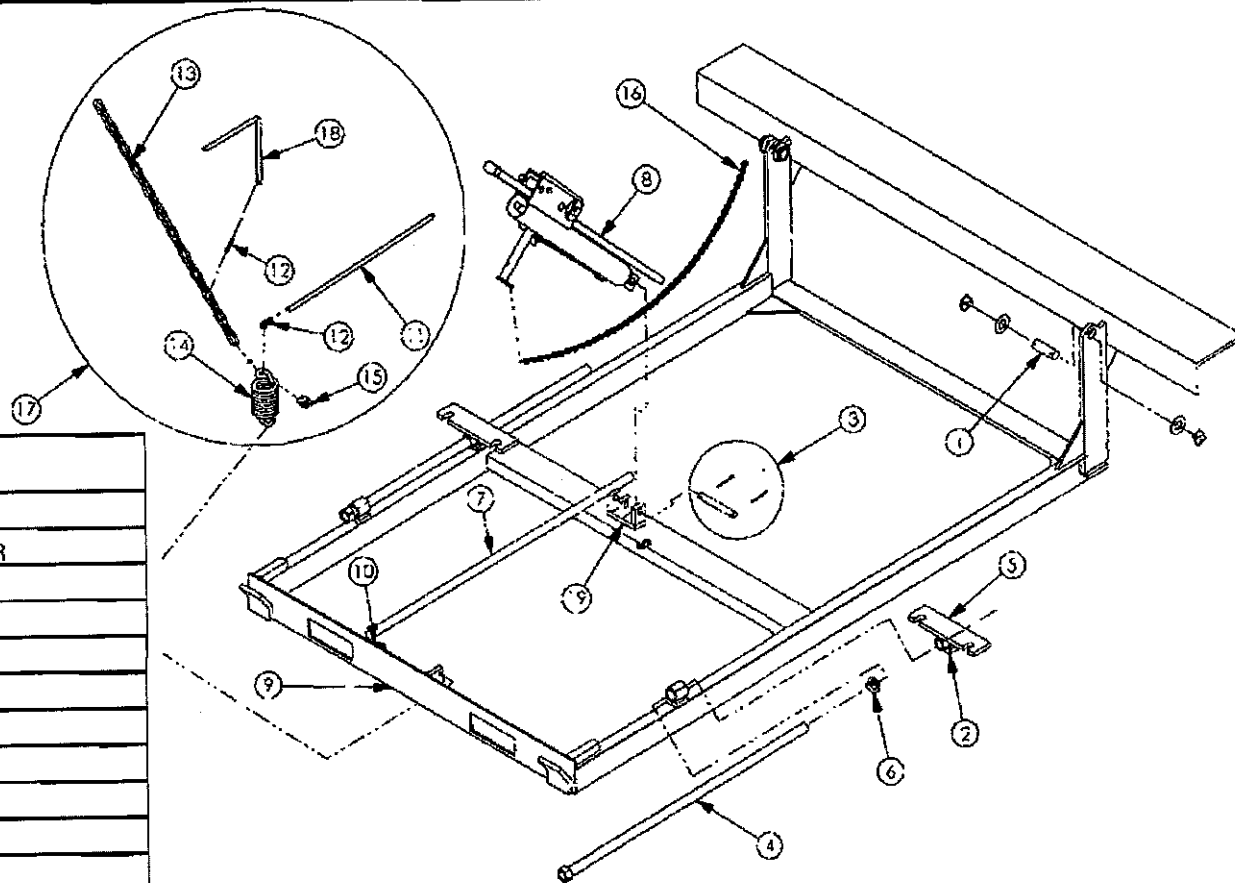

PARTS LIST	
ITEM	DESCRIPTION
19	RATCHET MOUNTING ASSEMBLY LOWER
18	LIP LOCK SPRING
17	SNUBBER CHAIN ASSEMBLY
16	PULL CHAIN
15	WIRE ROPE CLIP 5/16"
14	SNUBBER SPRING
13	CHAIN - THROW OUT
12	"S" HOOK 3/16" X 1 3/4"
11	SPRING - SLACK CABLE
10	CHAIN - MAINTENANCE STRUT
9	BASE ASSEMBLY
8	RACHET ASSY W/ RELEASE
7	ROD - MAINTENANCE STRUT
6	WASHER - 1" LOCK
5	WING NUT ASSY
4	MAIN SPRING ADJUSTING ROD ASSY, 36"
3	LOWER PIN KIT
2	TAB - STOP SPACER, LIP LOCK, SPRING MOUNT
1	DECK REAR HINGE KIT (SET)