

202 East High Street P.O. Box 370 Ashley, OH 43003 **1-800-457-5251** Phone: 740-747-2623 Fax: 740-747-2188

INSTALLATION INSTRUCTIONS FOR STRIP DOORS



Your Rotary Products Strip Door has been custom-fabricated for your opening, based on dimensions supplied to the factory.

YOUR DOOR MAY BE IN MORE THAN ONE PACKAGE.

If this is the case, the packages are marked "A", "B", "C", etc. This indicates the order in which the sections contained in each package should be mounted, left to right. The "A" package, will also indicate if yours is a face-mount door, or a between-the-jambs mount that goes under the lintel.

YOUR DOOR HAS THREE PARTS, (1) the MOUNTING BRACKET, which may be mounted either on the face of the wall immediately above the opening, or on the bottom surface of the lintel, (2) the STRIP RETAINER, which holds the STRIPS to the MOUNTING BRACKET, and (3) the STRIPS themselves.

MEASURE THE WIDTH OF YOUR OPENING and mark the center point on the wall or lintel, whichever is appropriate for your particular door. As noted above, your door utilizes one or more MOUNTING BRACKETS. If the center of the door system is at a bracket splice, you'll find two arrows, one each on two brackets. This splice should be positioned with the center mark you've made. If the door center is not at a splice, locate the bracket with an arrow, and align that arrow with your center mark.

MOUNT THE BRACKET(S) INTO POSITION. If there are more than one, keep them in the "A", "B", "C", order, left to right, as indicated on the package. Use the holes in the top of the flange for an under-the-lintel installation, or the holes in the back of the flange for an on-the-wall mounting.

(Continued on Side 2.)



IF THERE IS MORE THAN ONE SECTION to your door, the RETAINER BRACKET may extend beyond the end of one section along with a portion of the STRIP as in Drawing A. If this is the case with your door, remove the overhanging RETAINER and butt the MOUNTING BRACKET against the center section as in Drawing B. If there is no overhanging RETAINER, merely butt the two sections together. In either case, lap the STRIP across the joint, maintaining the same over-and-under pattern. If you had an overhanging RETAINER, re-install it, spanning the joint.

THE STRIPS ARE LONGER THAN YOUR OPENING IS

HIGH. When installed, the STRIPS should clear the floor by about 1/4-inch. Mark the proper length on the STRIP with a felt marker, or other instrument. Using a piece of wood, such as a 2 x 4, as a cutting surface, trim the STRIF with a utility knife. In cold weather, the STRIPS can be quite tough, so you may need to make two or three slices with the knife.

NOTE: THE STRIPS MAY BE so concave that they do not overlap properly when you first install the door. This is especially true in cold weather. However, this concaveness will flatten out, and the STRIPS will provide a good, over-lapping closure a short time after your door is hung.

If you have any questions or comments, please call the factory, toll-free. We will be happy to assist you in any way.

Thank you for choosing a fine Rotary Products, Inc. Strip Door. If you have any problems with installation or questions about the strip door, call Chris at 1-800-457-5251.

